

# Dacon Rescue Dummy

The Most Robust and Versatile Exercise Dummy Available!



Dacon Rescue Dummy - adjusted for horizontal floating position

- Realistic Rescue Dummy of Human Size and Weight
- For Recovery Drills from Rescue vessels and FRC
- For SAR Training
- Used by:
  - ◆ Offshore Industry
  - ◆ Police
  - ◆ Coast Guard
  - ◆ Helicopter Rescue Squadrons
  - ◆ Fire Brigades
  - ◆ Pilot vessels
  - ◆ Ferry Companies
  - ◆ Merchant Shipping



Dacon Rescue Dummy  
- adjusted for vertical floating position

# Dacon Rescue Dummy

The Most Robust and Versatile Exercise Dummy Available!

## The Dacon Rescue Dummy

### Description

The Dacon Rescue Dummy is a large and heavy exercise dummy developed with the purpose of making maritime training, involving rescue and handling of persons, as realistic as possible without exposing crew members to unacceptable or unnecessary risks.

With a height of 6 feet, all the main joints and proportions of a person and a weight adjustable up to 90 kilos, the Dacon Dummy resembles a person in most rescue situations. It will also demonstrate realistically the handling problems a rescue crew will be faced with in a real life rescue operation.

The Dacon Rescue Dummy fills with water for ballast. May be partly drained for transport and stowage if required. It has inherent flotation and cannot sink even if punctuated. A lifting eye in the neck is provided for crane handling or stowage.

The Dacon Rescue Dummy is supplied with a specially designed cover-all incorporating a Flotation Position Control system allowing the Dummy to float either horizontally or vertically for variation in rescue technique.

The Dacon Rescue Dummy is designed and manufactured in Norway by Dacon AS.

### Areas of Use

The Dacon Rescue Dummy is specially suited for evacuation- and recovery drills. Unlike most makeshift dummies it will float and handle with very similar characteristics as a person.

The Dummy may be used with any recovery method, including the Dacon Rescue Scoop and the Dacon Rescue Frame. It is also well suited for helicopter rescue drills from water or life raft.


The Dacon Rescue Dummy is extremely robust and will take severe abuse. It may be dropped in the water from any realistic height from vessel, rig or helicopter and may be handled in just about any manner.



Recovery of the Dacon Rescue Dummy using the Dacon Rescue Frame



The Dacon Rescue Frame

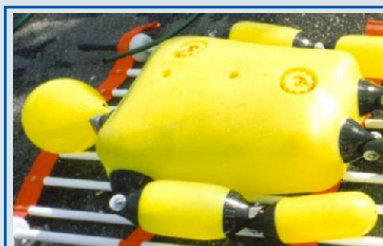

Fills with water to working weight

### Specifications

- Robust design - PVC skin
- Stainless steel joint
- Max weight: up to 90 kg
- Stowage weight: 40 kg
- Shipping weight: 22 kg
- Height: 190 cm



The Dacon Rescue Dummy - fitting the PVC



Gml. Ringeriksvei 6  
P.O.Box 133

1321 Stabekk  
NORWAY

Tlf: +47 21 06 35 10  
Fax: +47 67 53 34 40

rescue@dacon.no  
www.dacon.no