PLT® Line Retrieval






Anchor Handling Emergency Towing Bunkering Operations

Can also comply with US/CAN transport regulations on request.

Article 1005	PLT Launching Unit 1 Air Cylinder, 300bars/4350psi or 200bars/2900psi 1 Launching Unit 1 Cover for air cylinder	1
-	1 Cover for all cylinder	
Article 3303	Launching Tube 125/150	1
Article 7002	PLT Line Pick-up Grapple	1
Article 6203	Line box 5mm HMPE	1
	Lineboxcontaining Line 5mm Braided Dyneema, Art No 6103.100/120m. Floats and has very little elongation under stress. Breaking strength of the line: 19613N (2000kg).	
	Other options of line on request User Manual and USB stick included	

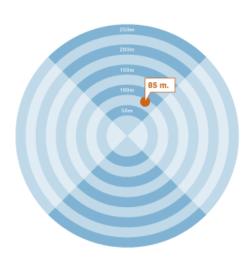



Operations

The PLT is used by Anchor Handlers to safely and effectively grab the anchor buoy softline. This is done by having a secondary small buoy attached to the free end of the softline.

You can launch the Line Pick-up Grapple up to 85 meters from a safe and elevated spot on your vessel.

